



beqballe spare parts list

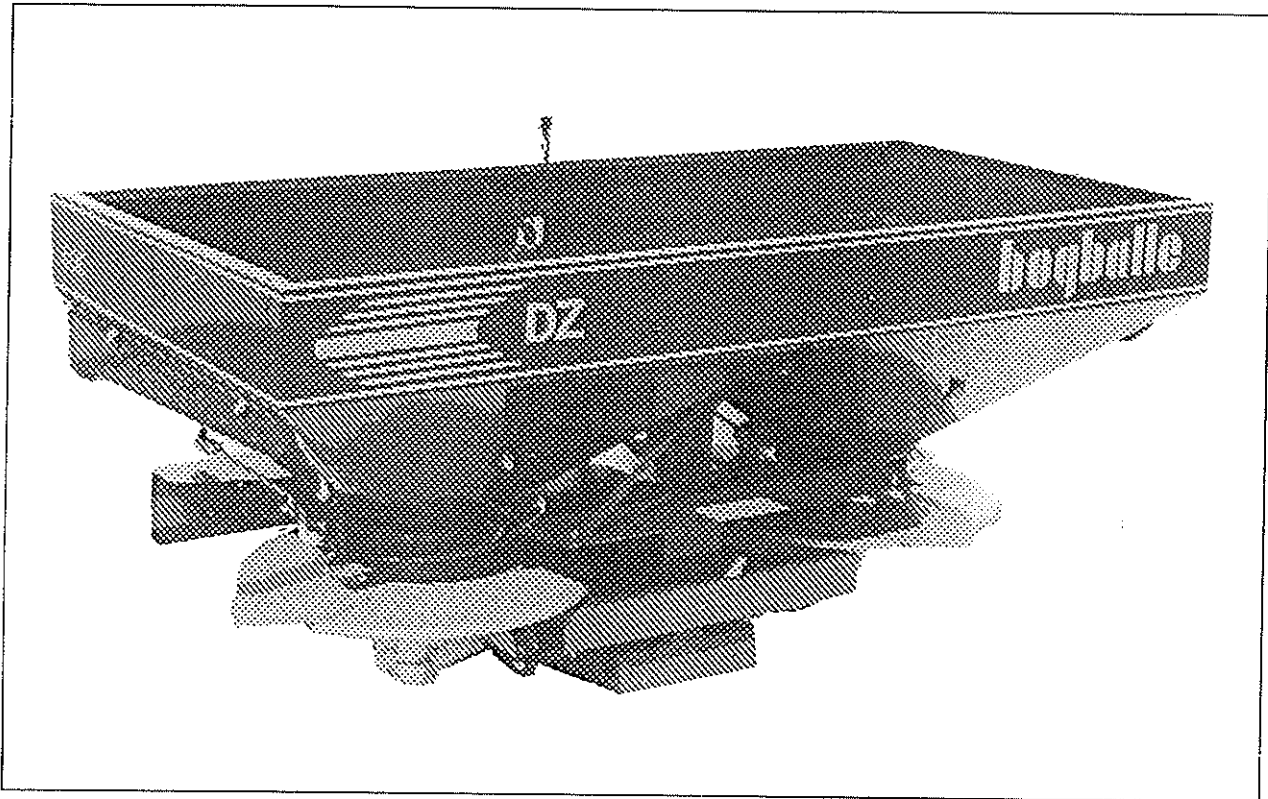

DZ

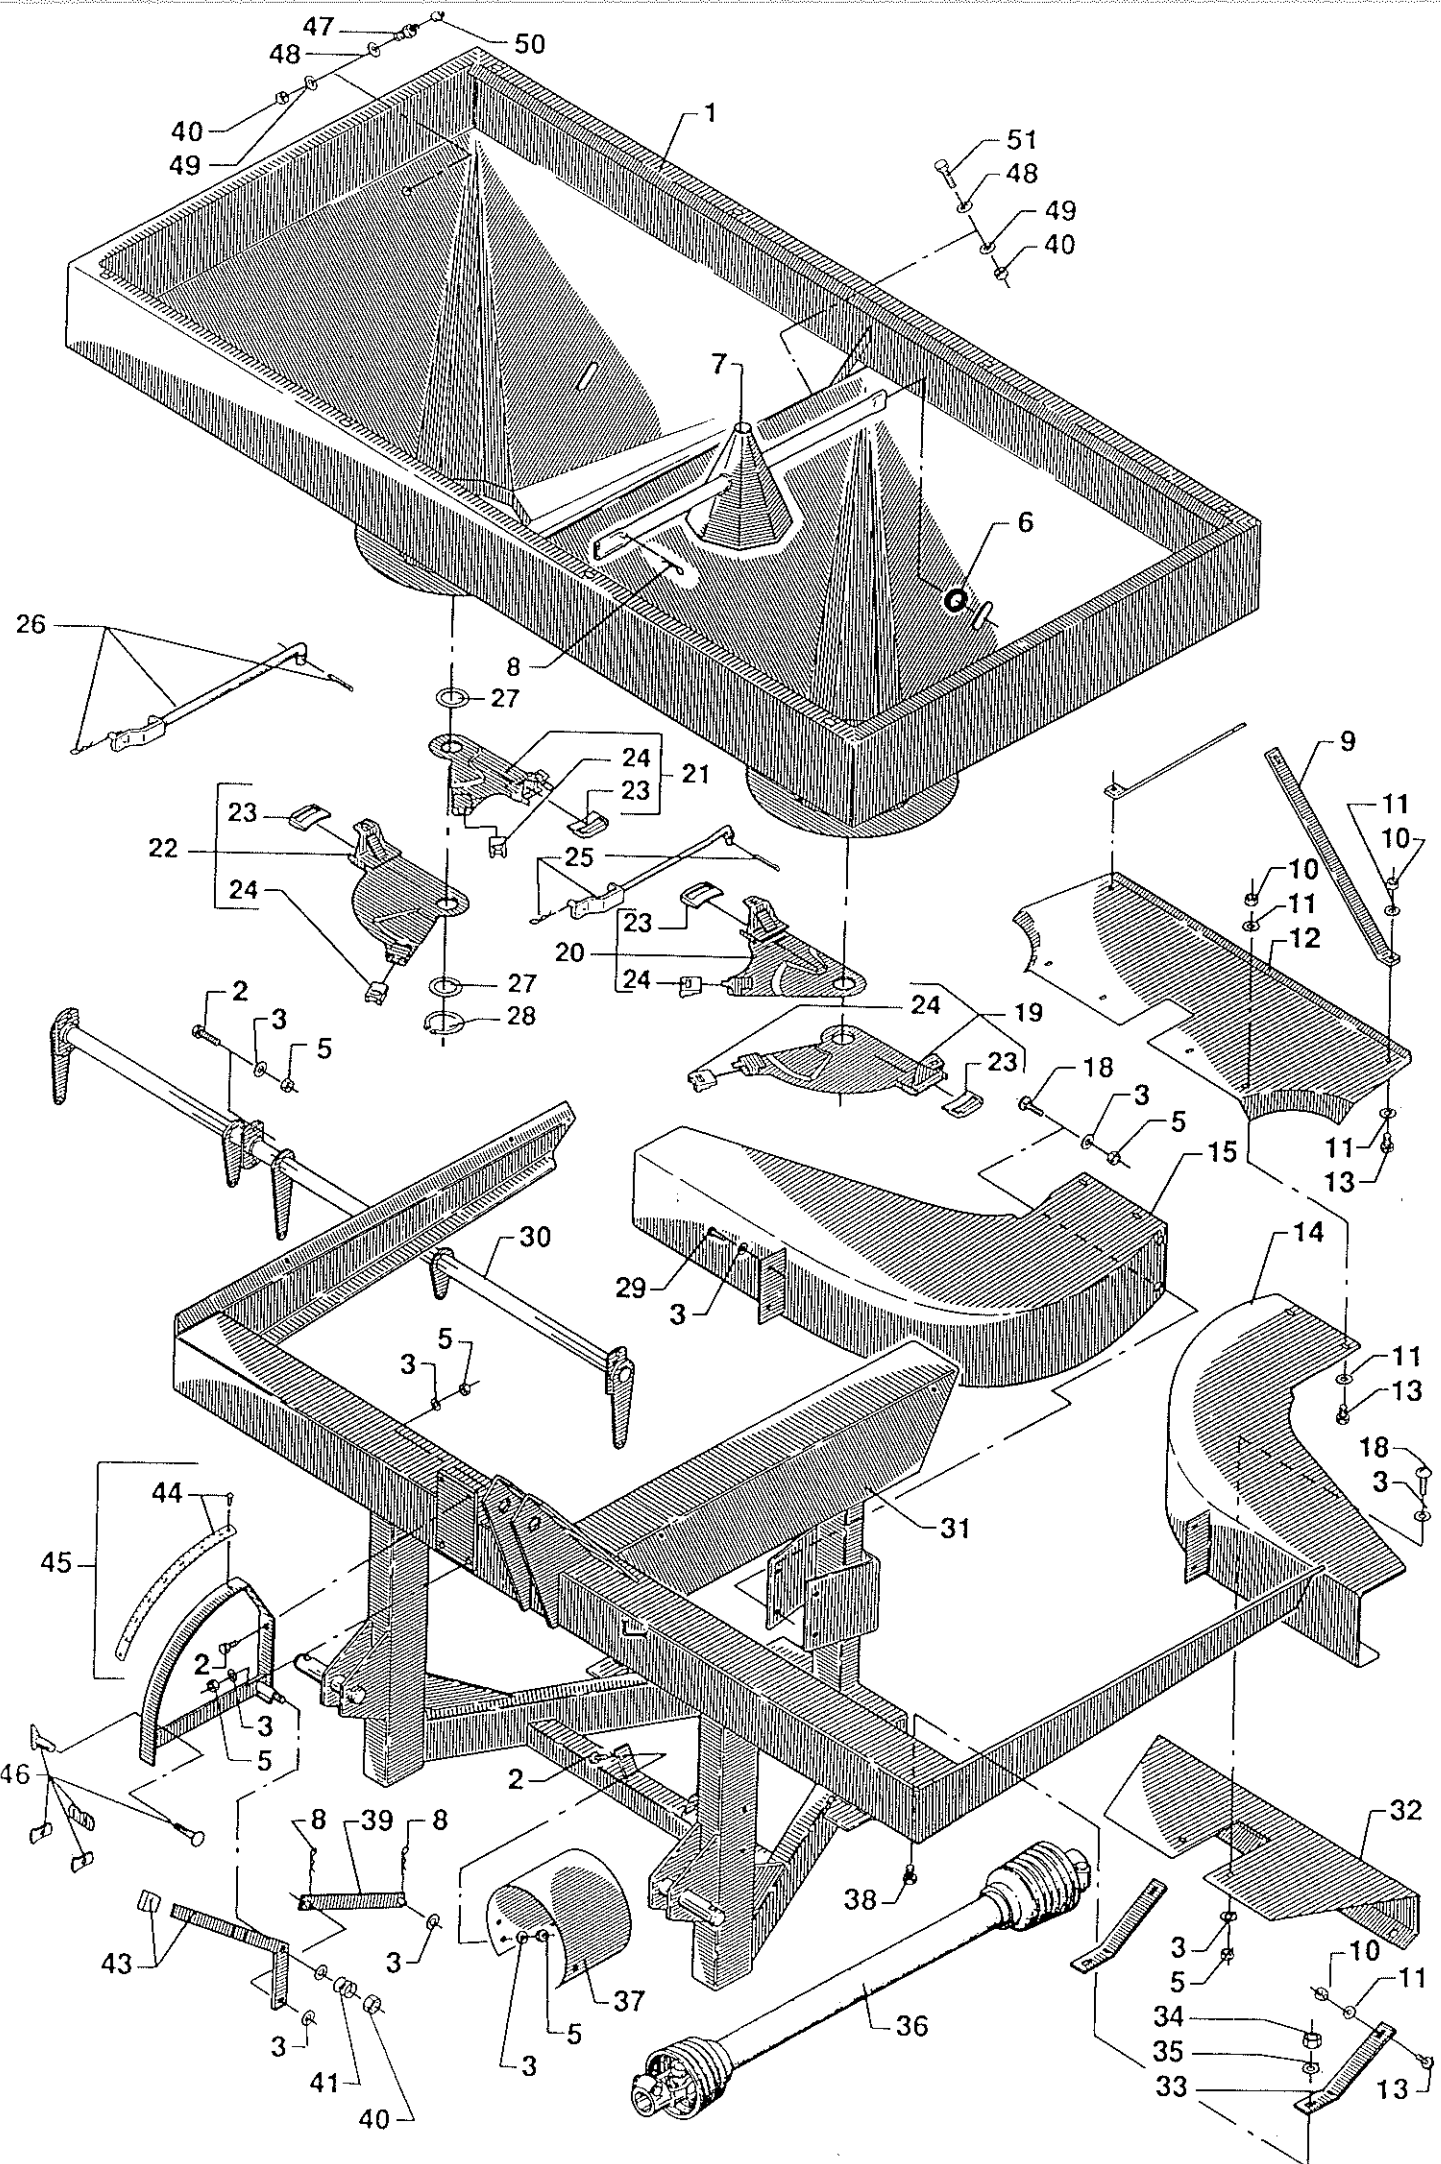


bogballe

A. P. LAURSEN A/S . 7171 ULDUM
DANMARK
TLF.: 75 89 32 66 . FAX: 75 89 37 66

Type DZ

Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	4310-04	DZ			
2	9962-04	M8 x 20			
3	9930-32	D8/17			
5	9969-31	M8			
6	9990-55				
7	4416-01				
8	9934-34	9934-34			
9	4374-03				
10	9969-15	M6			
11	9930-02	D6/12			
12	4474-02				
13	9964-00	M6 x 16 9964-02			
14	4471-01	Left 4471-11			
15	4471-02	Right 4471-12			
18	9909-27	M8 x 16			
19	4412-05	Left			
20	4412-08	Left			
21	4412-09	Right			
22	4412-06	Right			
23	4412-20				
24	4412-21				
25	4441-05				
26	4441-06				
27	4012-11				
28	9937-30	U44			
29	9962-03	M8 x 16			
30	4440-01				
31	4320-01	DZ			
32	4473-01				
33	4473-02				
34	9968-16	M12 9969-60			
35	9930-35	D12/24			
36	9985-27	710 mm			
37	4470-01				
38	9964-45	M12 x 35 9965-01			
39	4442-25				
40	9969-45	LM10			
41	9934-26	ø4,5 x 20 x 15			
43	4442-19				
44	3270-06				
45	4442-09				
46	2871-01				
47	4310-07				
48	3210-05				
49	9968-44	D10/21			
50	9990-21				
51	9963-01	M10 x 25			

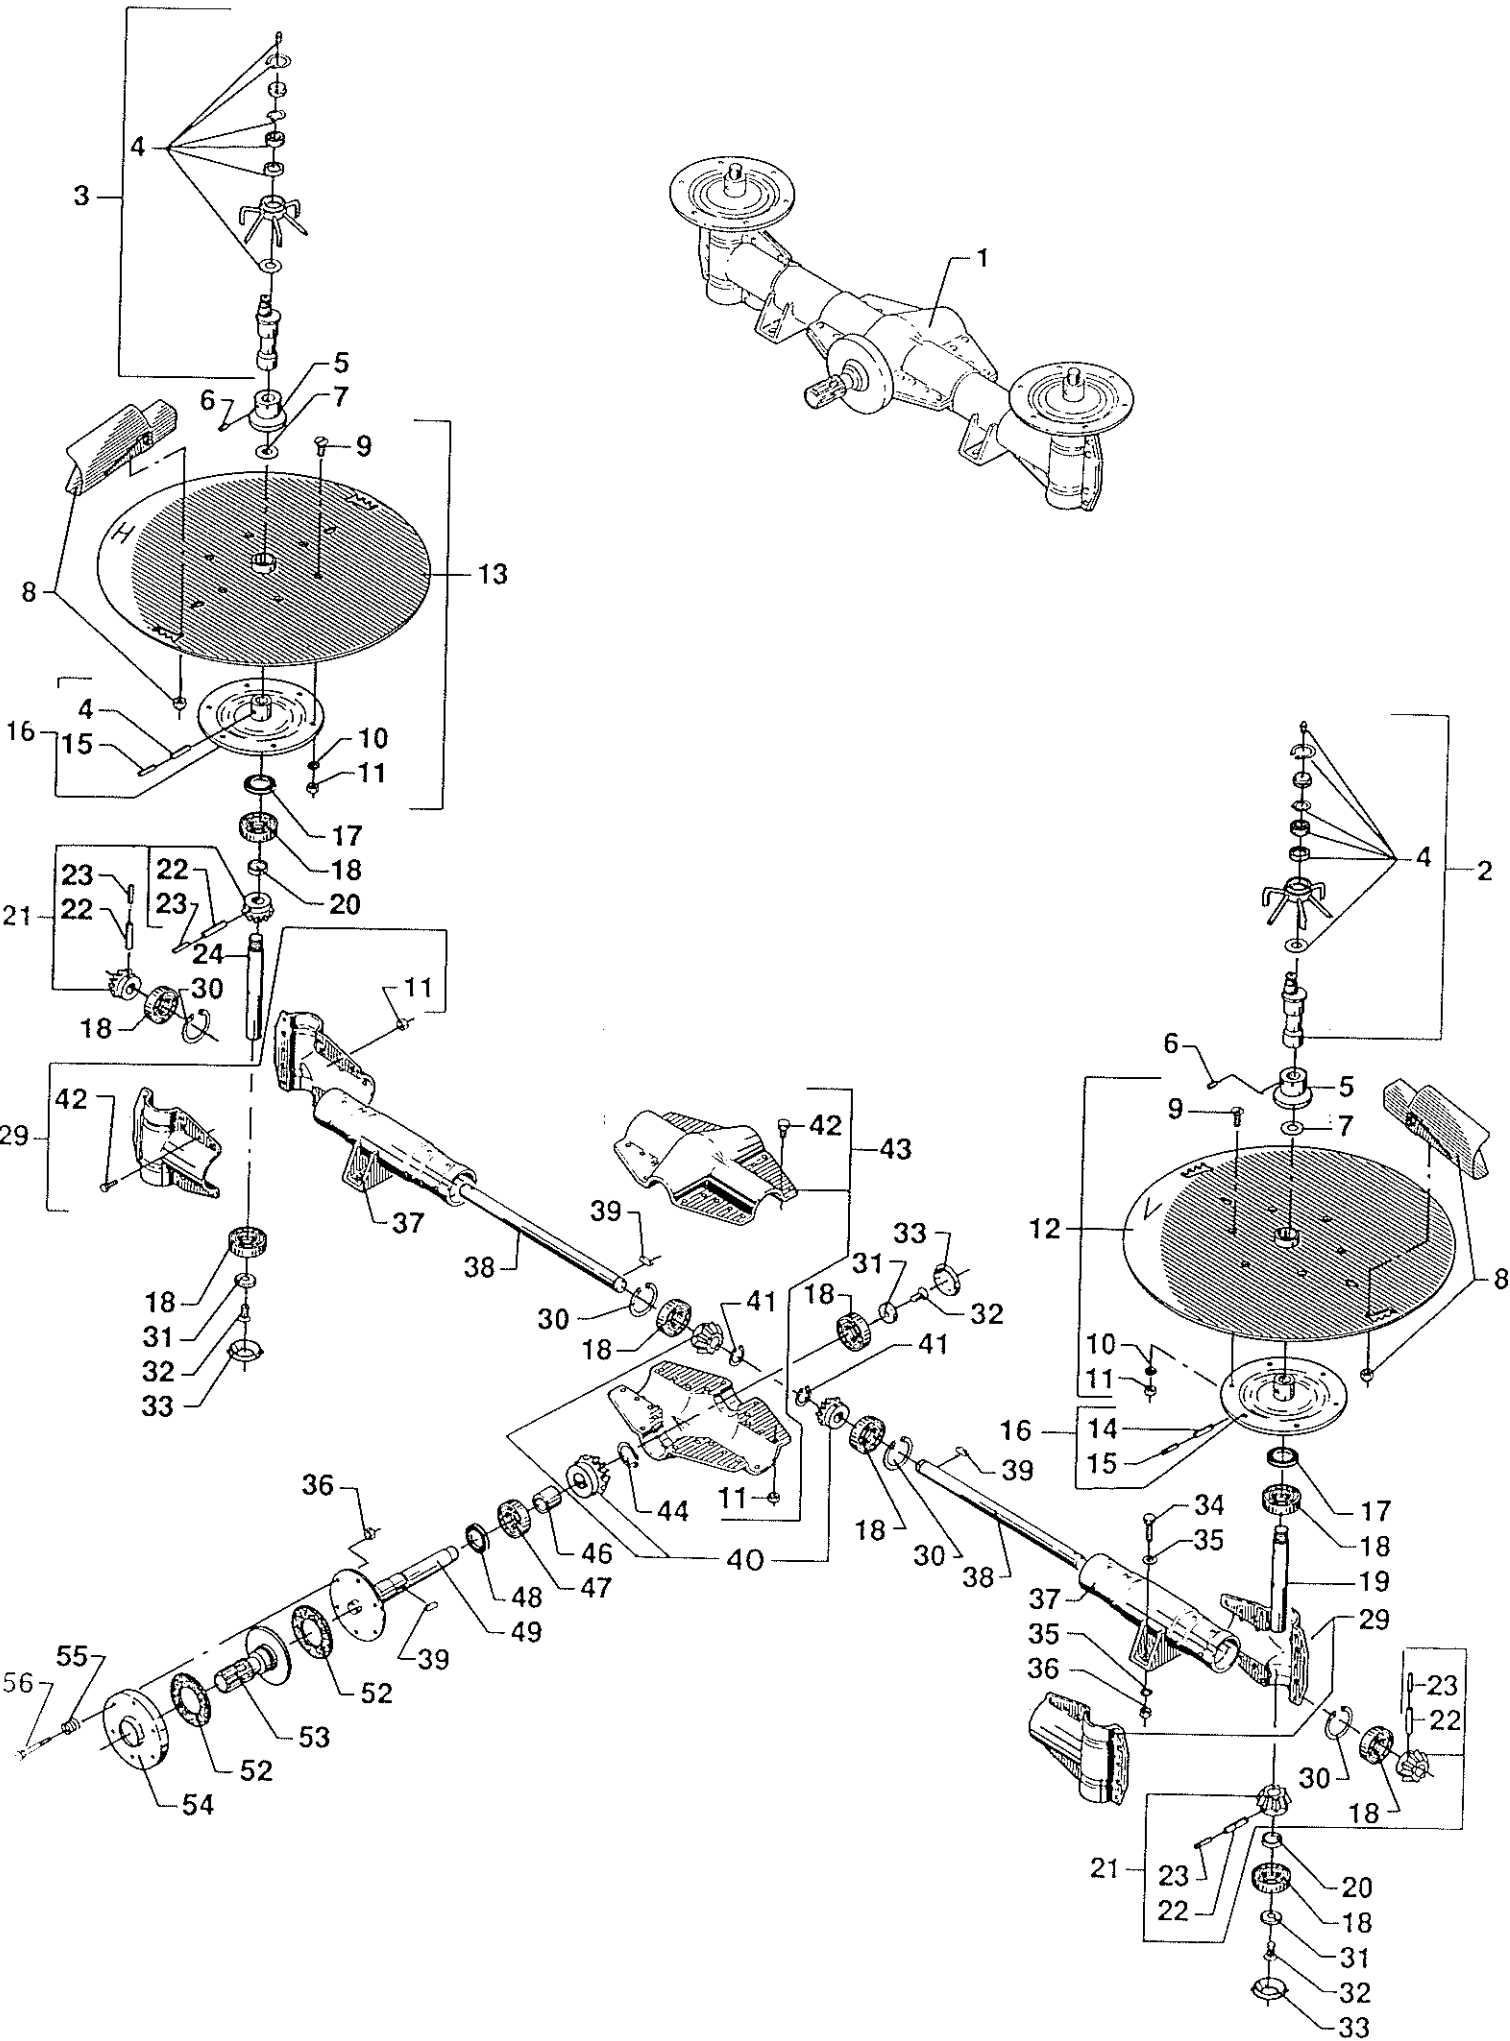


beqballe

A. P. LAURSEN A/S . 7171 ULDUM
DANMARK
TLF.: 75 89 32 66 . FAX: 75 89 37 66

Type DZ

Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	4350-02	DZ - 540/750			
2	4160-01	"R"			
3	4160-02	"L"			
4	4056-10				
5	4158-05				
6	9913-20	M8 x 10			
7	4160-05	ø20 x ø35			
8	4250-11	2 Left + 2 Right - "E1"			
9	9929-35	M8 x 20			
10	9968-71	SS8			
11	9969-31	M8			
12	4150-16	Left - "V"			
13	4150-17	Right - "R"			
14	9933-02	ø8 x 40			
15	9933-11	ø5 x 40			
16	4051-05				
17	9936-37	35 x 62 x 12			
18	9950-02	6305-2RS			
19	4155-04	"R"			
20	3262-05				
21	3265-02				
22	9933-12	ø8 x 45			
23	9933-17	ø5 x 45			
24	4062-05	"L"			
29	4454-05				
30	9937-40	I 60			
31	3260-04				
32	9913-43	M10 x 25 9963-07			
33	3260-05				
34	9965-01	M12 x 35			
35	9930-35	D12/24			
36	9969-60	M12			
37	4457-02				
38	4456-02				
39	9931-56	8 x 7 x 25			
40	4252-01	"E" - 17 tdr. + "E" 24 tdr.			
41	9937-00	U 25			
42	9962-03	M8 x 16			
43	4460-01				
44	9937-18	U 28			
46	4452-05				
47	9950-03	6206-2RS			
48	9936-37	35 x 62 x 12			
49	4452-02				
52	3260-09				
53	3263-00				
54	3260-07				
55	9934-03	6 x 25 x 32			
56	9965-02	M12 x 65			

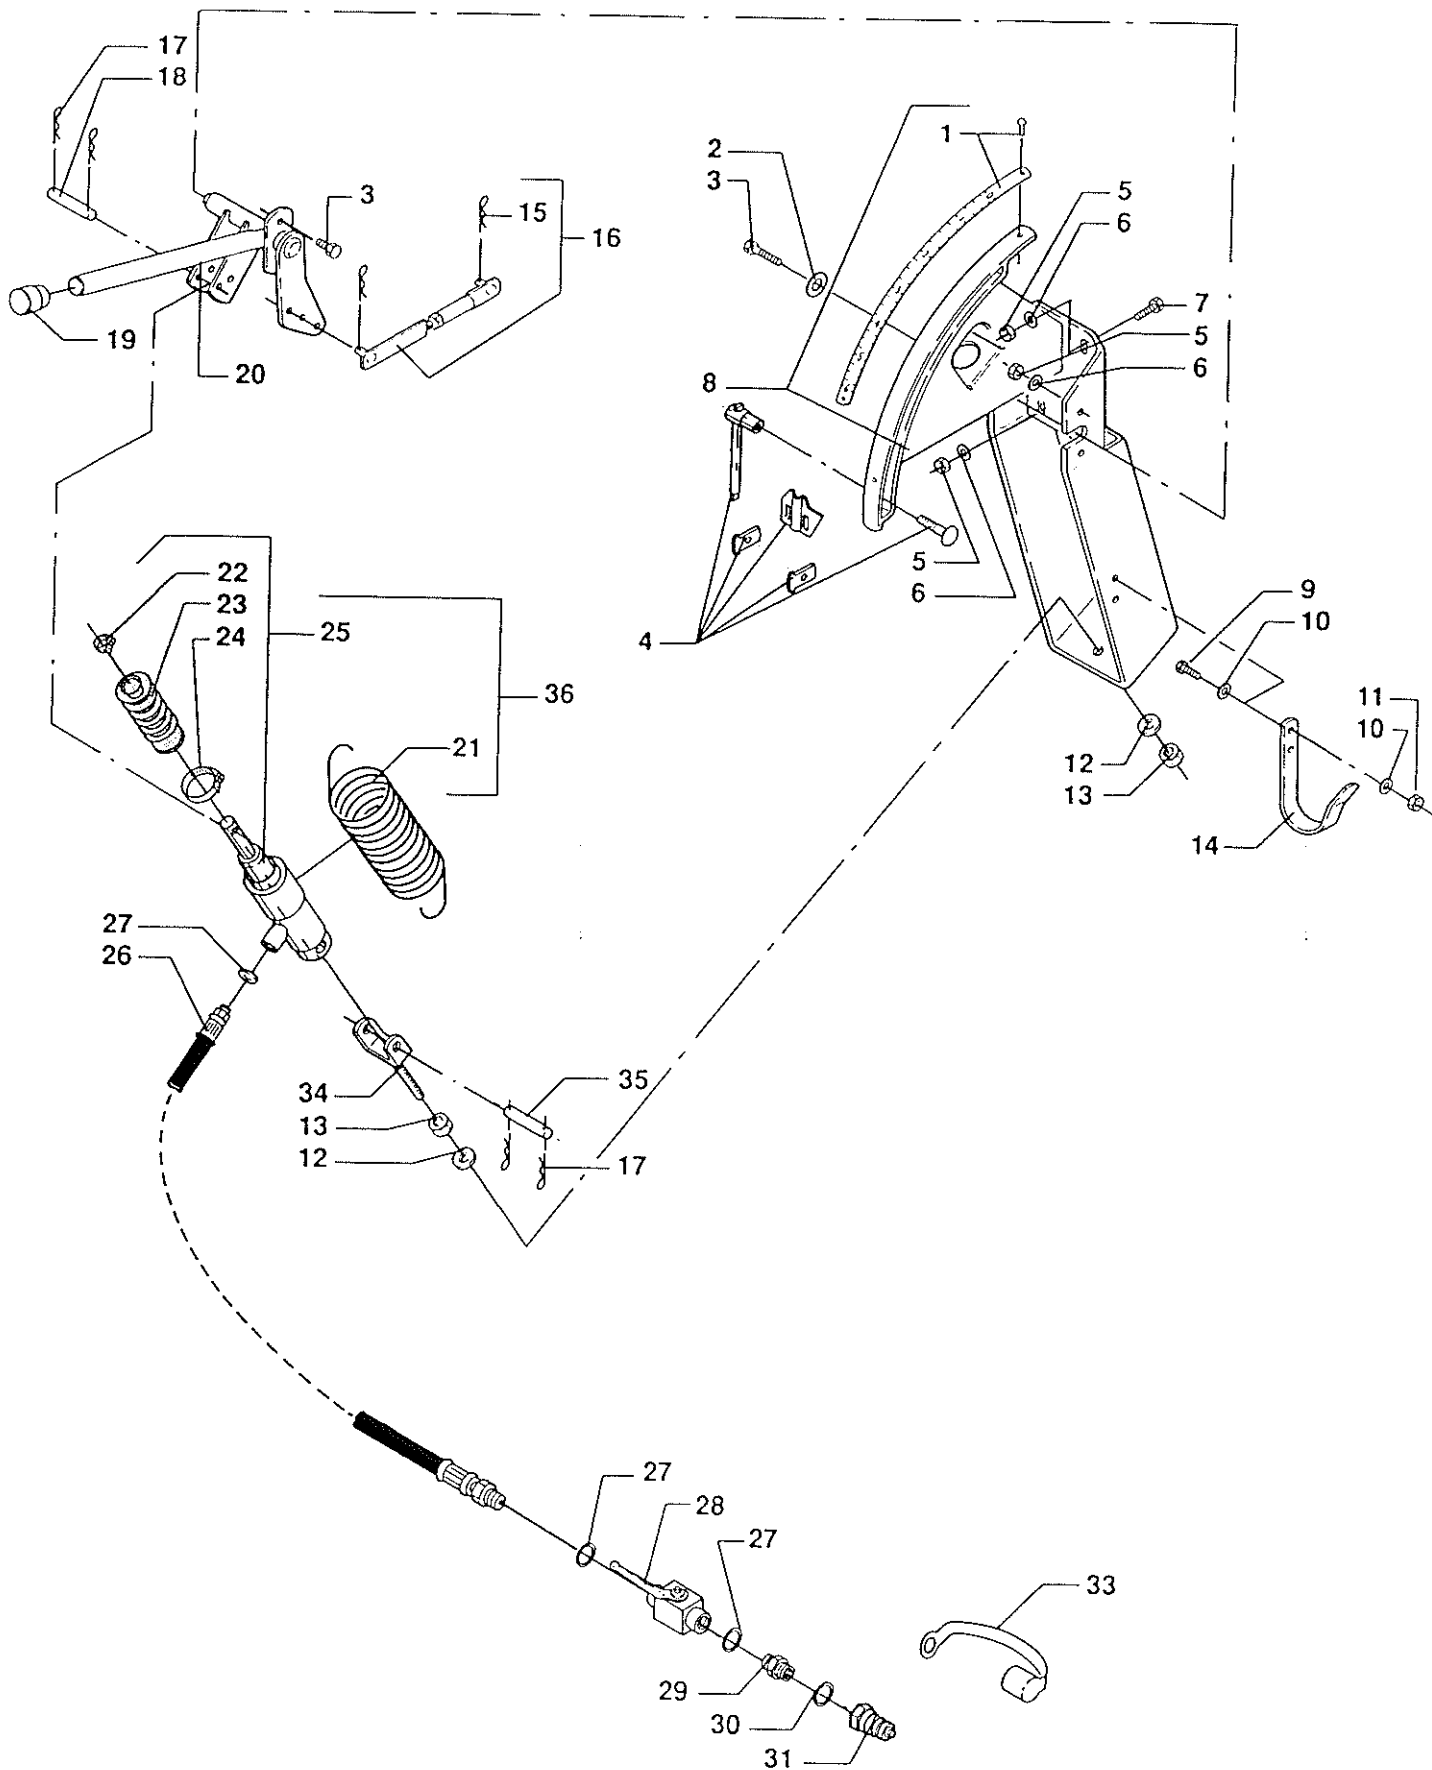

beqballe

A. P. LAURSEN A/S . 7171 ULDUM
DANMARK
TLF.: 75 89 32 66 . FAX: 75 89 37 66

Type DZ

Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	4381-06				
2	2810-18	D8/25			
3	9962-03	M8 x 16			
4	3961-30				
5	9969-31	M8			
6	9930-32	D8/17			
7	9967-04	M8 x 20 9962-04			
8	4381-07				
9	9961-04	M6 x 16			
10	9930-02	D6/12			
11	9969-15	M6			
12	9930-35	D12/24			
13	9969-60	M12			
14	4581-36				
15	9934-31				
16	4381-03	185/220 mm			
17	9934-32				
18	4581-29				
19	9990-52				
20	4581-10				
21	9934-14				
22	9990-60	D24			
23	9987-04				
24	9990-61	D40			
25	4581-15				
26	9983-29				
27	9936-79				
28	9982-06				
29	9990-84				
30	9936-80				
31	9983-09				
33	9990-19				
34	4581-25				
35	4581-28				
36	4581-37				

bøgballe

Spare parts list DZ from machine No. 405

Lista de piezas de recambio

Liste de pièce de rechange

Reservedelsliste

Onderdelenlijst

Varaosaluettelo

Reservdelslista

Ersatzteilliste

bøgballe

A. P. LAURSEN A/S . 7171 ULDUM
DANMARK . TELEFON 75 89 32 66
TELEFAX 75 89 37 66